

DEERTV

Outdoor TV Cabinet . Lite Installation Guide



Address: Liaobu, Dongguan, Guangdong, China, 523018
Website: www.deertv.com Email: info@deertv.com

Outdoor TV Enclosure. Lite Installation



The DeerTV outdoor TV cabinets support 99% popular TV sizes. Available for outdoor and indoor, the outdoor TV cabinets ensure your TV working for a long time within a safe and optimal environment.









Most of the outdoor TV cabinets you've seen in the markets are made of wood or plastic, but DeerTV offers unique metal (aluminum alloy) TV cabinets. It allows you to enjoy the outdoors without missing your favorite shows. We manufacture them from the best materials with a focus on quality and longevity. They are sure to match your needs with various shapes and sizes.

We provide free online design services if you are searching for a particular style or size. Our design team can also advise as your needs, including the best products to satisfy any individual requirements.

Prepare Tools.

- Phillips screwdriver
- Hexagon screwdriver
- Electric Drill
- Marker (pencil)
- Silicone sealant (Options)

Parts List.

<i>Name</i>	<i>Description</i>	<i>Quantity</i>	<i>Picture</i>
<i>M6*50 and M6*25 Screws</i>	For TV VESA	5 / type	
<i>Thick pad washers,10/15/20mm</i>	For TV VESA	5 / type	
<i>M4*20</i>	For rear cabinet	6	
<i>M4 thumb screws</i>	For rear cabinet	2	
<i>M4 flange nuts</i>	For front & Rear doors	22	
<i>M6 x 50 screws</i>	For Enclosure VESA holes	4	
<i>M4 Socket wrench</i>	For M4 nuts	1	
<i>Handle</i>	For front door	2	

Install Front Door


1. Check all accessories.



2. Place the 2pcs front door parts together and connect them together with nuts. (Components: 2 pcs front door parts, M4 nuts)




3. Assemble the 2pcs handles. (Components: 2pcs handles, screws)

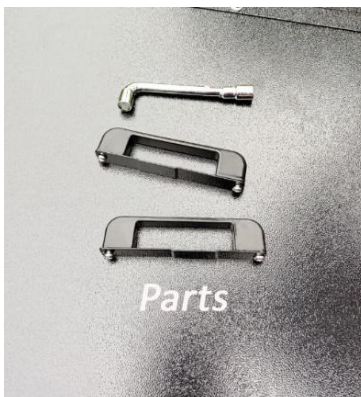

Install Rear Cabinet

1. Assemble the rear door. (Components: 2pcs rear door parts, M4 nuts)

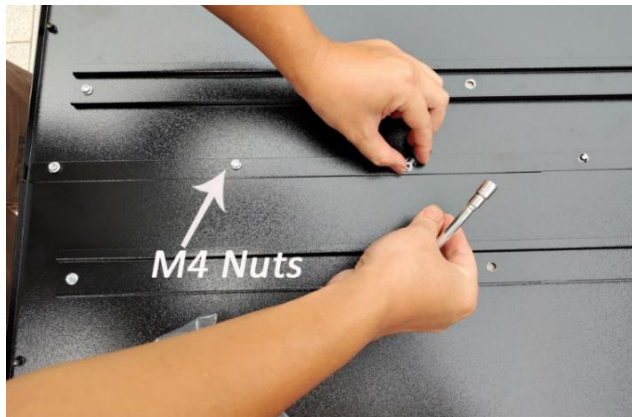

2. Assemble the rear frame. (Components: 4pcs front frame parts, M4 nuts).
Ensure all screws holes in the same direction and fix it by M4 nuts.



3. Assemble the rear frame and rear door together. (Components: M4 Screws).



Install the optional hook for front door. (Unnecessary, except you want to hook the front-door to the rear enclosure)



Install the rear cabinet to the wall.

1. Check the installation position, adjust the vertical distance and level. (recommend to use a spirit level if available)
2. Mark the 4 screw holes with a pencil or marker.
3. Drill holes with an electric drill and install the rear cabinet to the wall with M6 screws. (Components: 4pcs M6 screws)




Install TV to cabinet

1. Calculate the middle point of the TV height and mark it. (For example, our TV is 55cm in height, so its middle position is 27.5cm). Install the Mount arm on the TV, ensure the arm center point is near the TV middle position.



2. If your TV thickness is less than 70mm, please add the thick pad washers and ensure the total thickness is around 80 ~ 90 mm. Please ensure the mount arm is **the correct direction** (as shown on the picture), then lock the bracket with appropriate length screws. (Components: 2pcs mount arm, M6 screws, Washer)

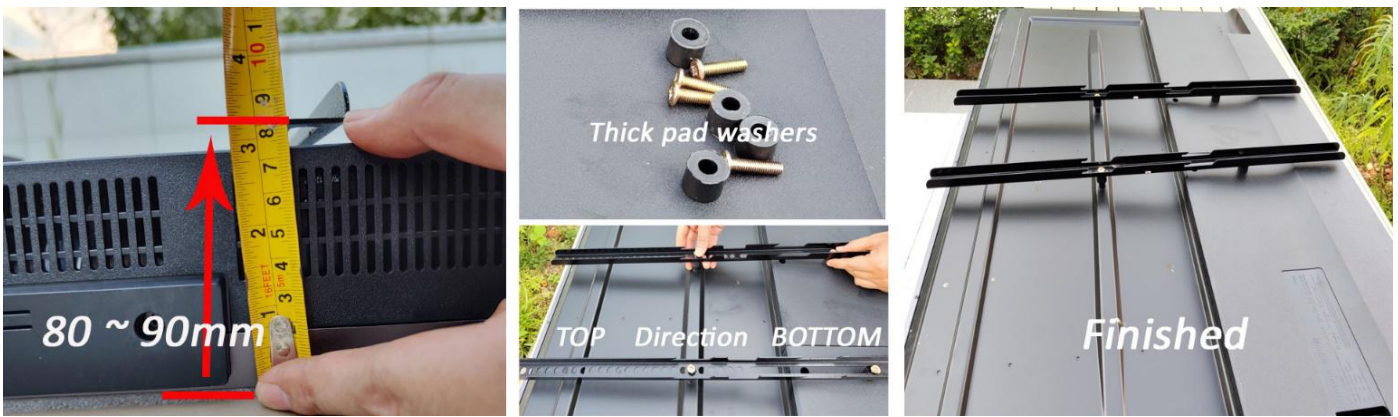

3. Pass all the wires through the waterproof holes at the bottom of the cabinet.



4. Hang the TV to the rear cabinet. (Please note that if your TV is wider, please change your gestures) Adjust the TV position horizontally to center the TV. Install the front door to the rear cabinet.



5. Hook the front door to the rear cabinet, install 2pcs thumbscrews, and lock it, finished. (Components: 2pcs thumbscrews)



Thank you very much for choosing DeerTV products.
Best wishes to you and your family.

DEERTV

Outdoor TV Cabinet Installation Guide



Address: Liaobu, Dongguan, Guangdong, China, 523018
Website: www.deertv.com Email: info@deertv.com