

DEERTV

Outdoor TV Enclosure . Pro

Windows Version


Installation Guide



Address: Liaobu, Dongguan, Guangdong, China, 523018
Website: www.deertv.com Email: info@deertv.com

Outdoor TV Enclosure Installation

Windows Version . Pro

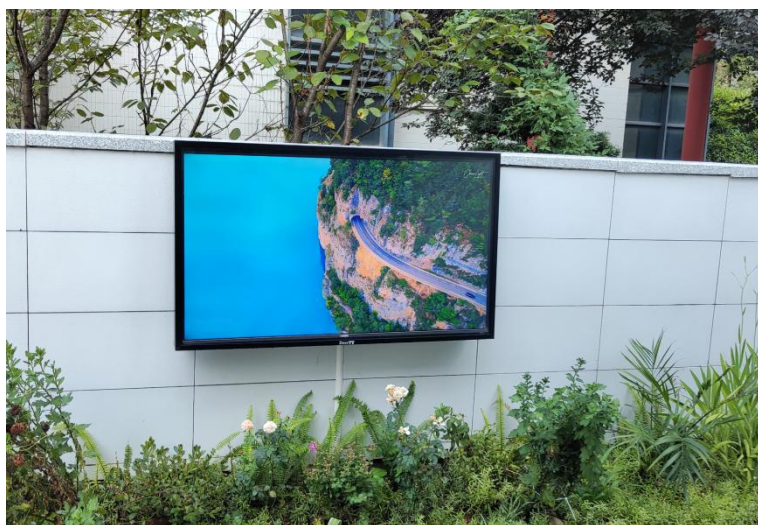









The Weatherproof TV enclosure which supports the 95% popular TV size. Available for outdoor and indoor, the outdoor TV cabinets are specially built to filter and cool ambient air, expel internal heat, which ensures your TV working for a long time within a safe and optimal environment. Read home Theater article for any comprehensive having a look at airborne contaminants of your house and what this will likely caused by your TV system. There are a few tips we could present you from the very beginning that may help you with one of these as well as other common problems as you are expecting your TV enclosure to reach.

Prepare Tools.

- Phillips screwdriver
- Hexagon screwdriver
- Universal TV mount bracket (Normal home TV bracket)
- Scissors and utility knife
- Silicone sealant (glass glue)
- Glass Or acrylic (If you have not chosen it)

Parts List.

Name	Description	Quantity	Picture
M6*50 and M6*20 Screws	For TV VESA	5 / type	
Thick pad washers,10/15/20mm	For TV VESA	5 / type	
M4*5 thumb screws	For rear housing	4	
M4 flange nuts	For front door	10	
M8*16 screws	For Enclosure VESA hole	5	


Silicone sealant	For acrylic and gap	Prepare by yourself	
M4 Socket wrench	For M4 nuts	1	
Lock cleats	Optional key locks	1	

A. Install Front Enclosure

1. Check all accessories.




2. Prepare the glass. (If you have chosen the optional glass/acrylic, please ignore this step)
43" enclosure glass dimension is 987 x 595 x (3~5mm thickness)
55" enclosure glass dimension is 1257 x 745 x (3~5mm thickness)
65" enclosure glass dimension is 1477 x 870 x (3~5mm thickness)
75" enclosure glass dimension is 1707 x 995 x (3~5mm thickness)
3. Assemble the rear enclosure and fill the gap with silicone sealant. (Components: 2 pcs Back Enclosure, M4 flange nuts)
/*Only for Size > 60" Enclosure. 43" and 55" are not needed*/

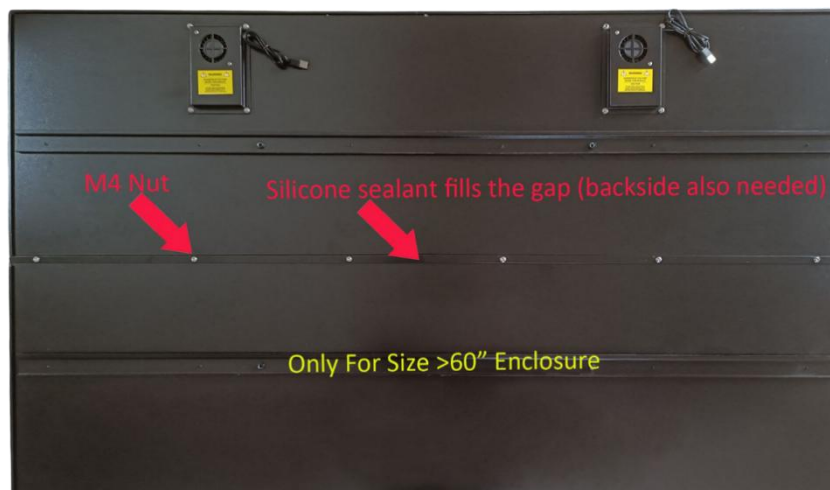


4. Assemble the front enclosure. (Components: 4 front frames, M4 flange nuts, M4 socket wrench).



5. Remove the 3M Double-sided adhesive protective film on the front enclosure.

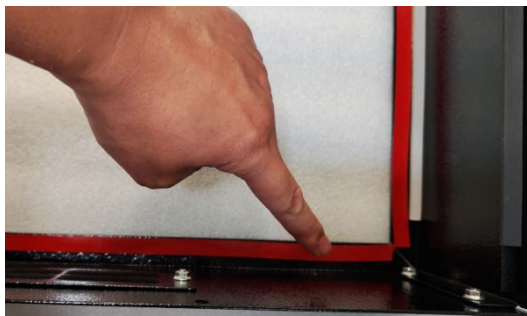

6. Remove the **front side** protective film of acrylic (facing human side) and install the glass/acrylic .

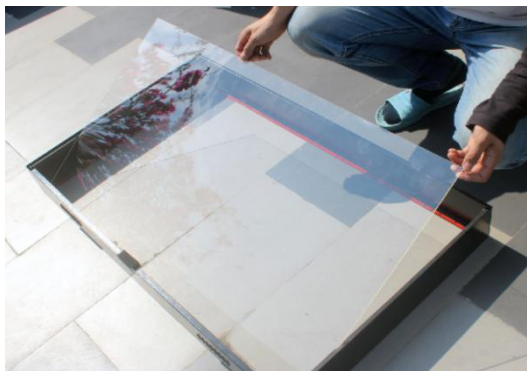


7. **Do not remove** the back side protective film of acrylic (reduces cleaning issues) then add silicone sealant (**Prepare yourself**) to the acrylic edge area and all gap area, to ensure it is complete waterproof.




8. Finished, put the front enclosure flat on the ground and let the silicone sealant cure for about 1 hour, then remove the acrylic protective film.

B. Install TV

1. Calculate the middle point of the TV height and mark it. (For example, The TV height is 55cm and its middle position is 27.5cm)

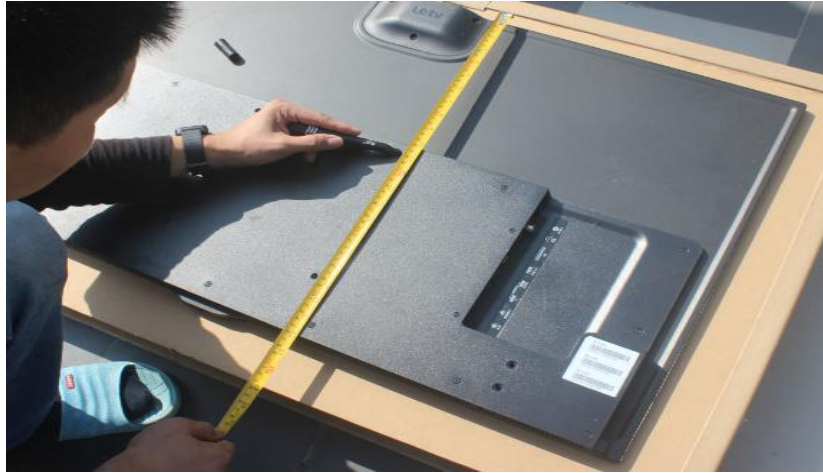

2. Install the Mount arm for the TV, ensure the center point is near the TV middle position.

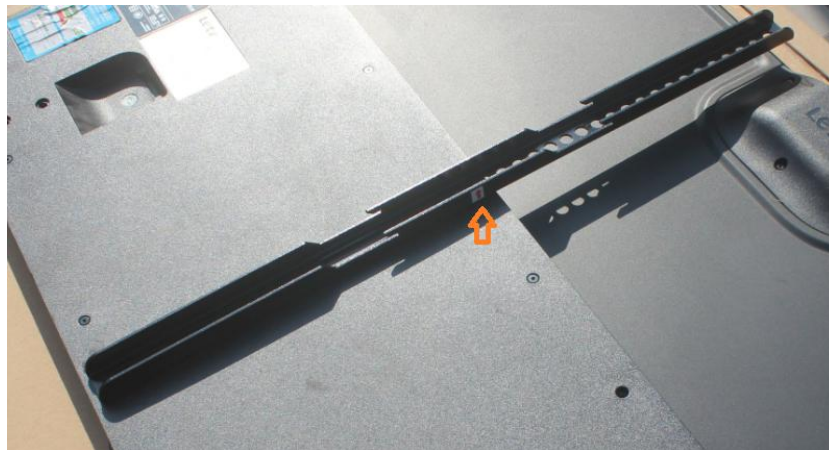

3. If your TV thickness is less than 7cm, please add the thick pad washers and ensure the total thickness is around 7~8cm.



4. Lock the bracket screws, the TV installation is finished.

C. Install Rear Enclosure

1. Install the Universal TV mount to the wall. (You can use any home TV mount, for this bracket, please prepare it yourself).



2. Install the mount ARM for the rear enclosure and fixed by screws.



3. Mount the rear enclosure on the wall, finished



D. Assembly together.

1. Connect all cables: AC cable, the USB cooling fan cable connected to the TV USB port. Mount TV on the rear enclosure.



2. Adjust the TV position horizontally to center the TV. Mount the front enclosure to the rear enclosure.

Very Important: Please put the front Enclosure pass through TV first (No Angle) then adjust the angle to mount the rear enclosure if your TV is big enough.

// If there is a deviation during assembly, you may need to slowly combine the front enclosure and rear enclosure together. //



3. Use thumb screws to fix the front enclosure and the rear enclosure. There are 3 thumb screws in total, and you must install at least 1pcs thumb screw. // The positions of the 3 thumb screws are on the **backside or bottom** area, see below picture. If there is a deviation during assembly, you may need to slowly screw it together. //



4. Finished, turn on the TV, enjoy your favorite TV programs. Thank you very much for choosing DeerTV products.
Best wishes to you and your family.



E. Optional lock pins *(Not necessary).*

Not necessary for home use, only recommend add it for public places

Drill an M4 size hole at the cables outlet of the front and rear TV enclosure position.(Bottom area)



Use the M4 nuts fix the LOCK pins.

